

Fig. 1

FIG. 1

Channel Changing Class

channel up  
channel down  
number buttons (0-9)  
previous channel  
TV/VCR

206

Volume Changing Class

Volume up  
Volume down  
Mute

204

Power Class

Power  
off  
on

202

Transport Class

Play  
Stop  
Rewind  
Fast Forward  
Next channel (track, chapter, preset)  
Previous Channel (track, chapter, preset)  
Record  
Pause  
Next

208

Control Class

Surround  
Display  
Menu  
Guide  
Up  
Down  
Left  
Right  
Reset (exit, cancel)

210

Fig. 2

TOP SECRET

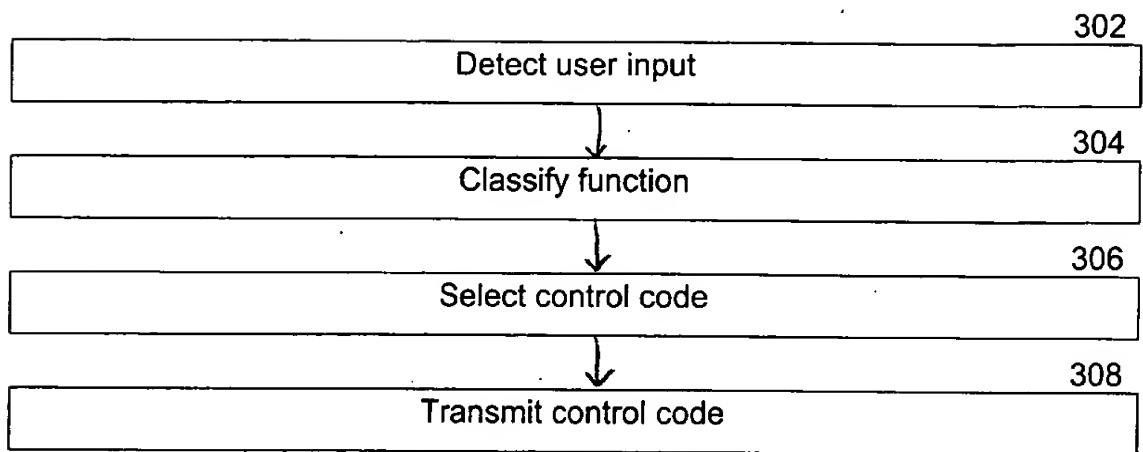


Fig. 3

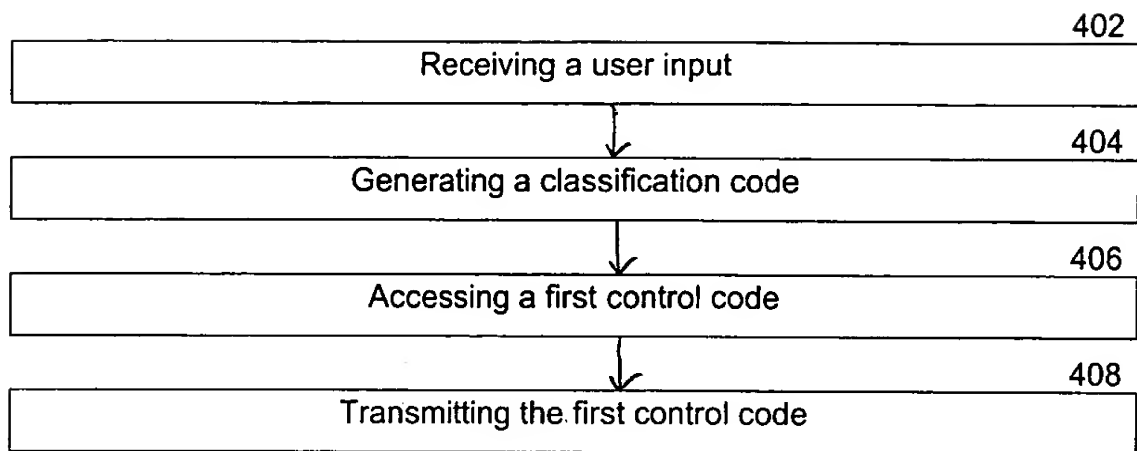


Fig. 4

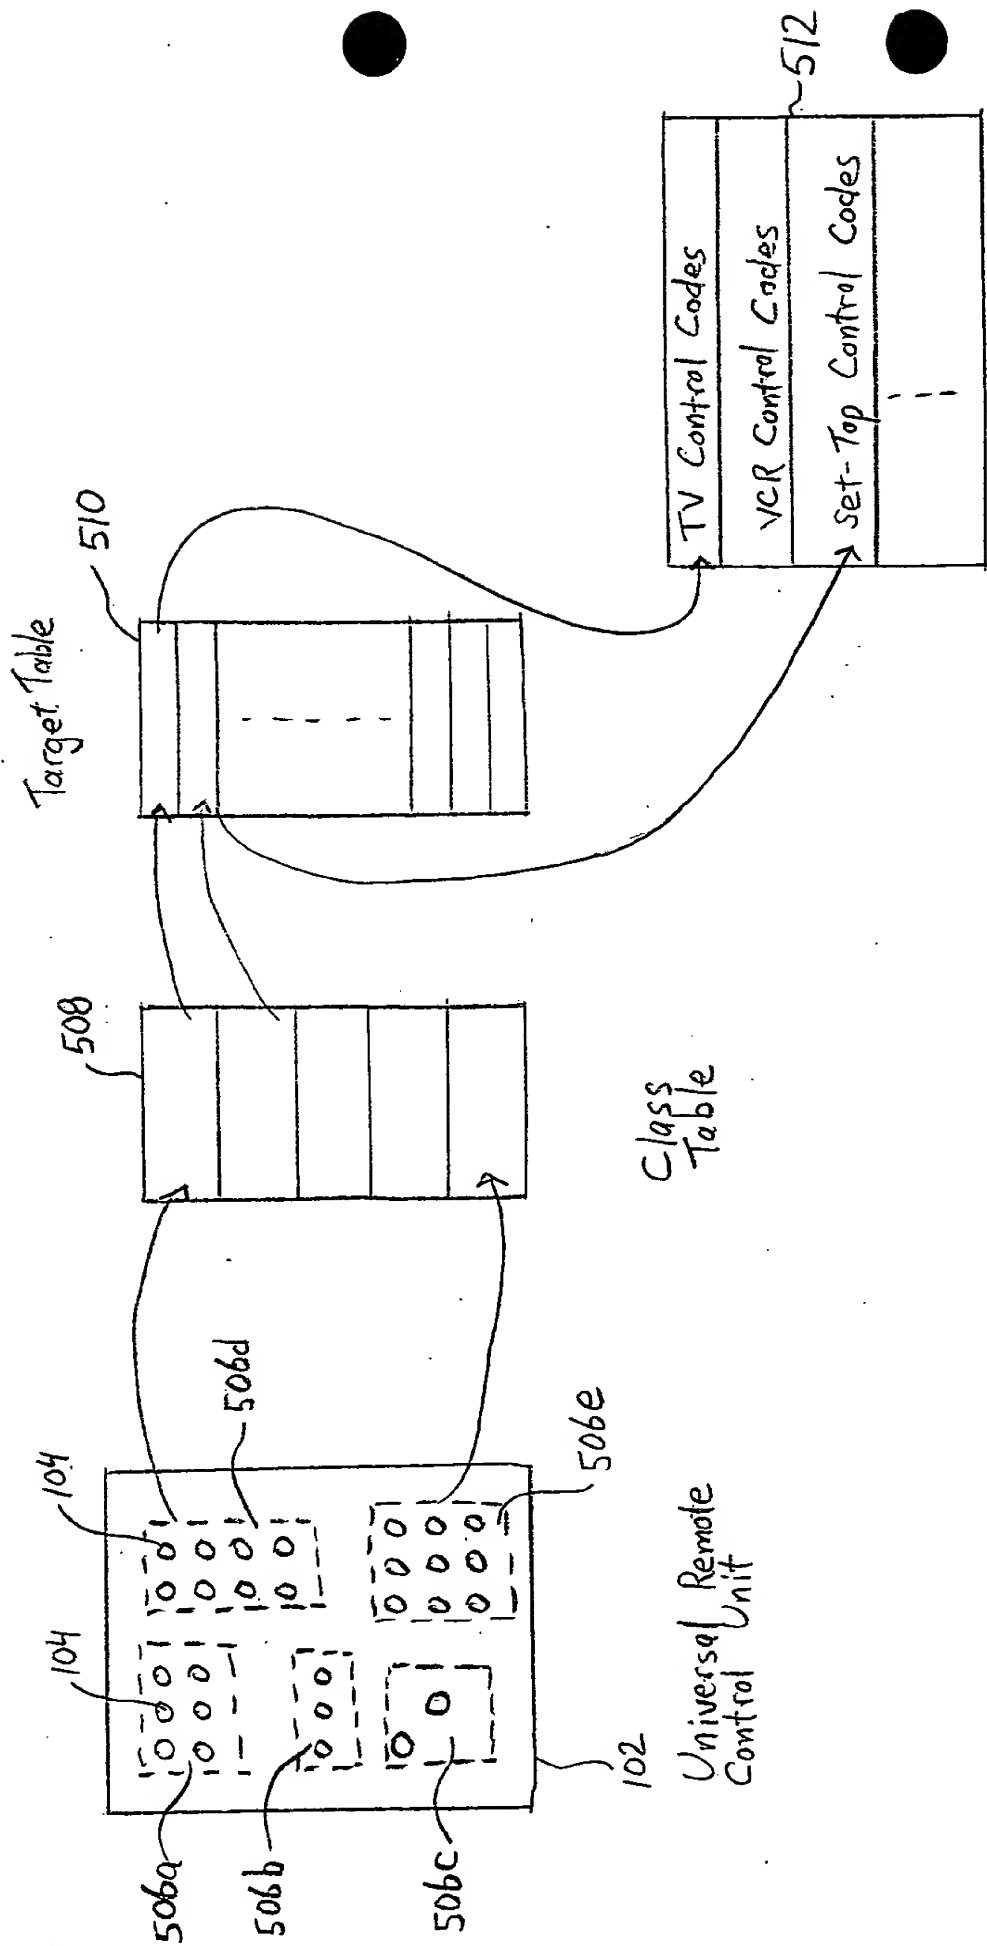


Fig. 5

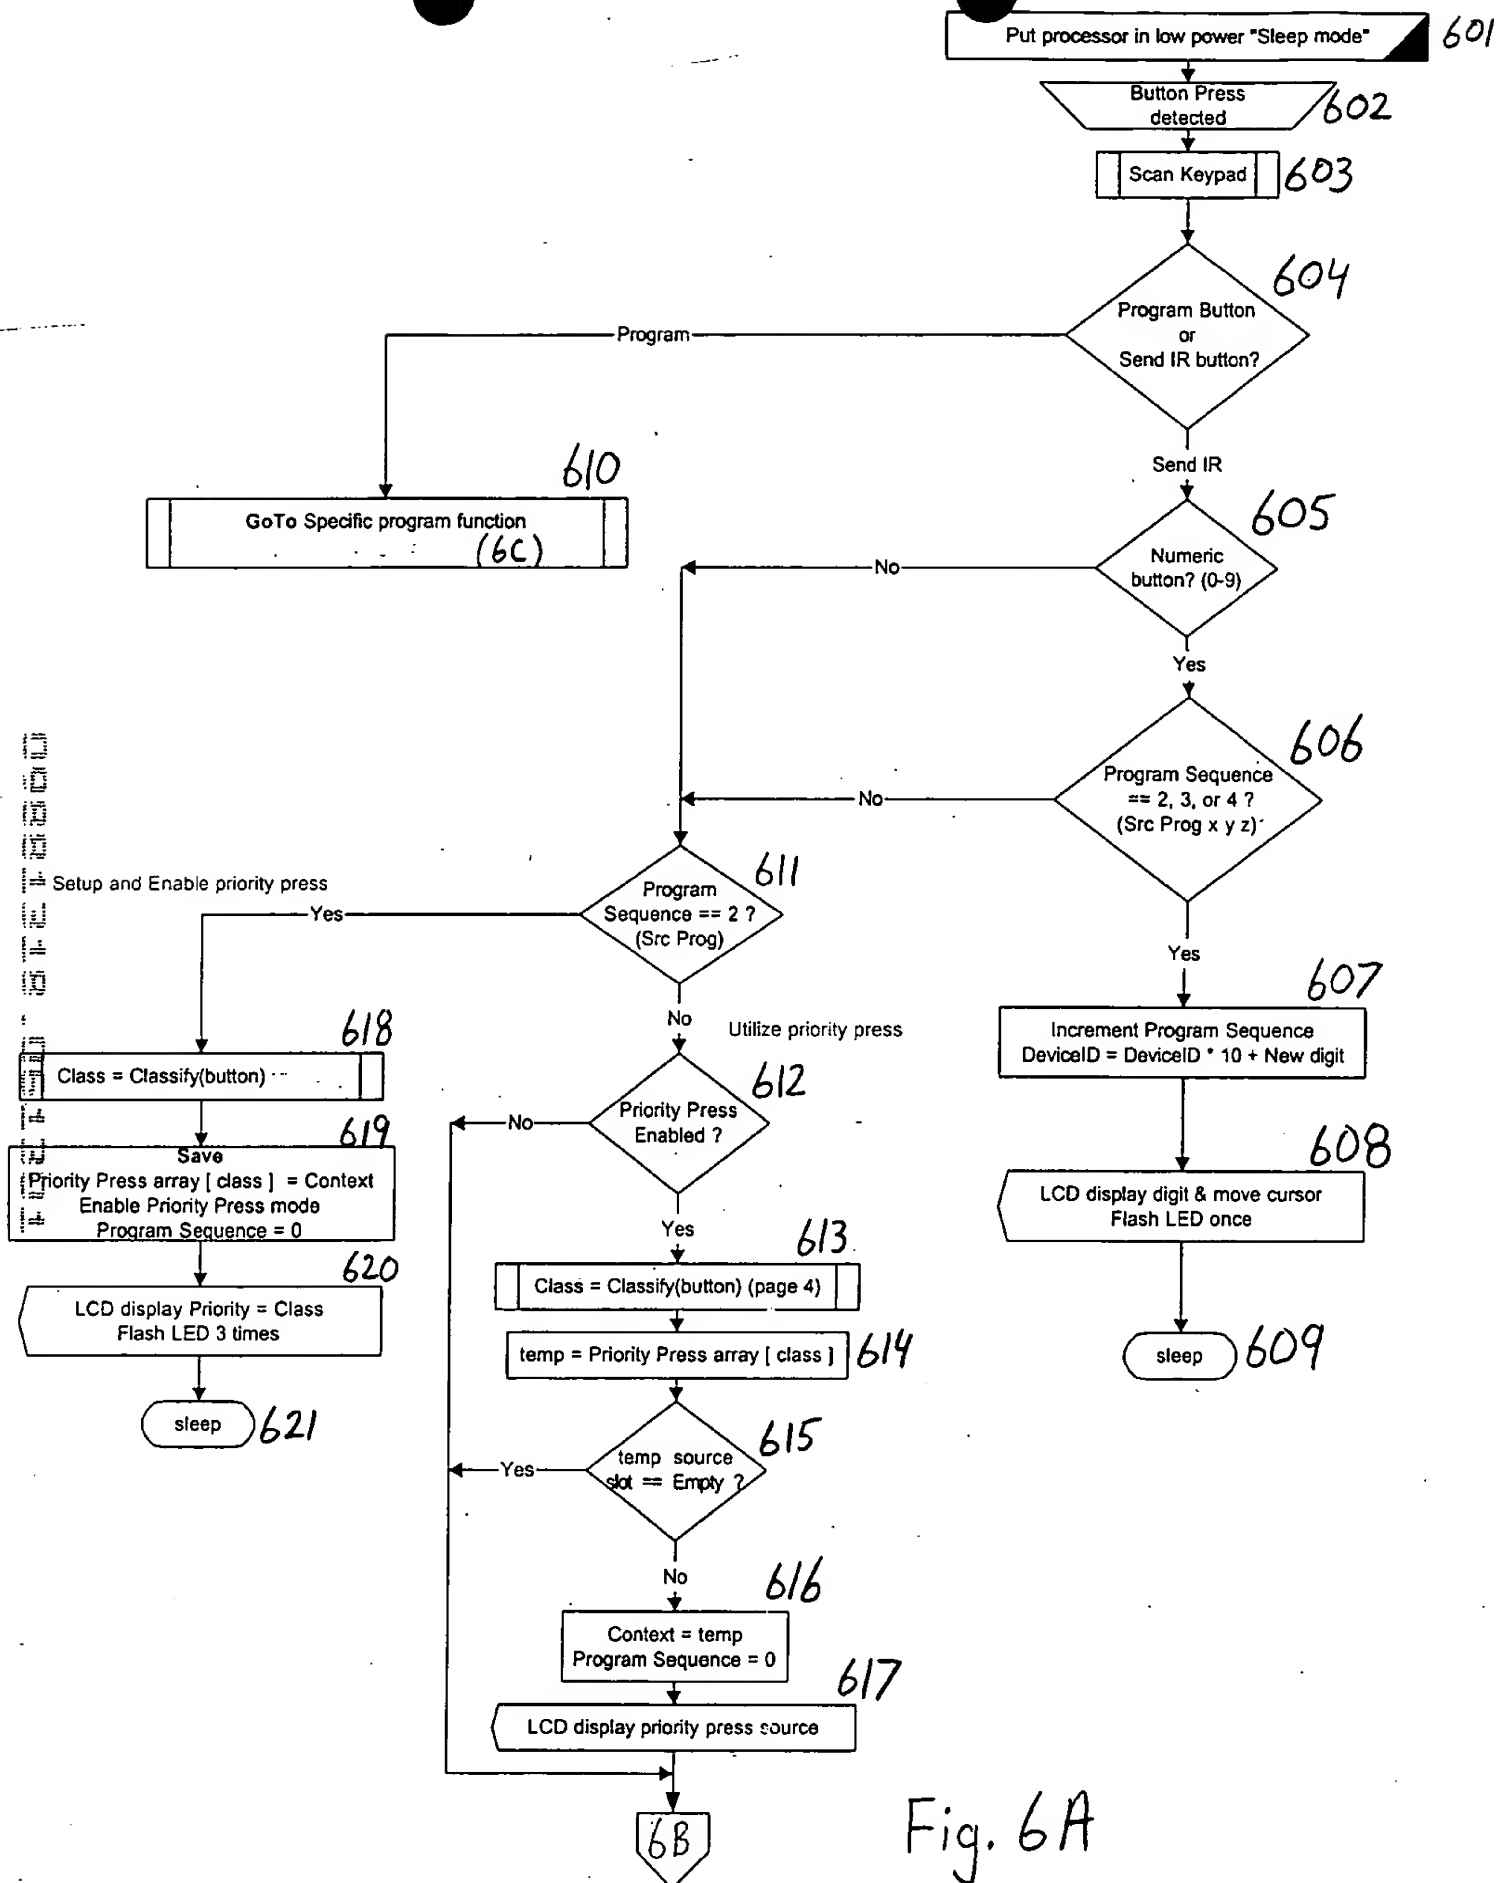


FIG. 6B

Beyond the scope of this discussion


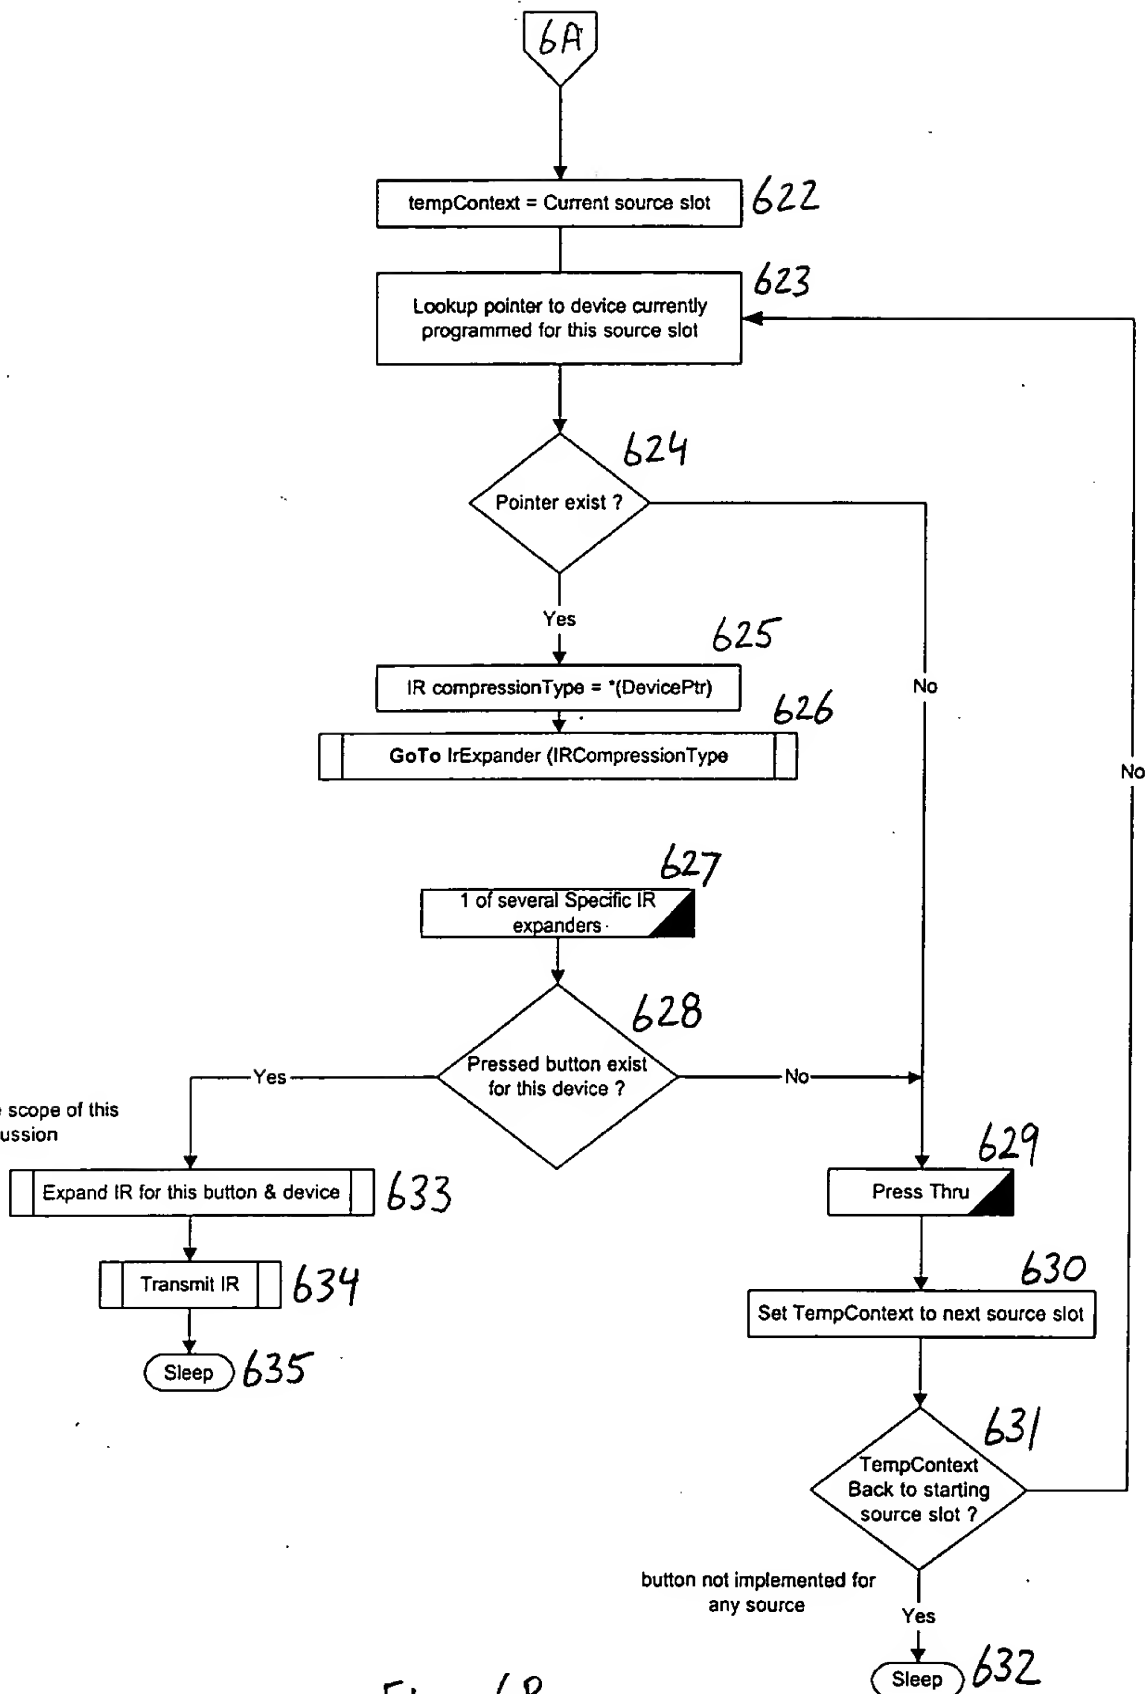


Fig. 6B

Fig. 6C



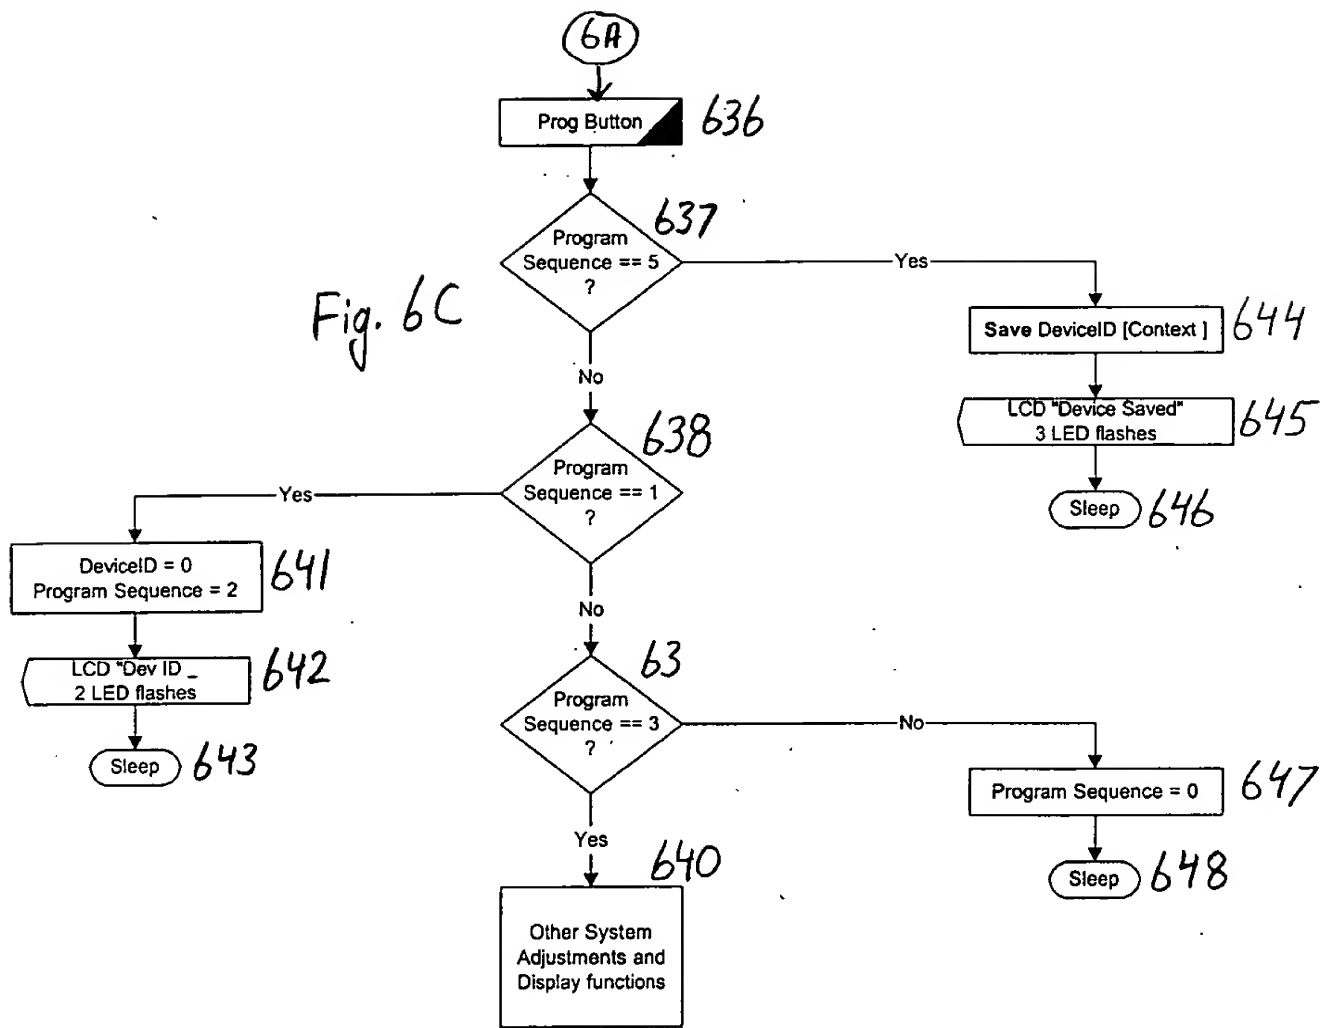

Disable priority press

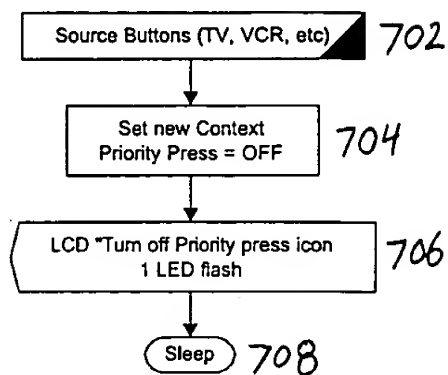


Fig. 7

Enable priority press

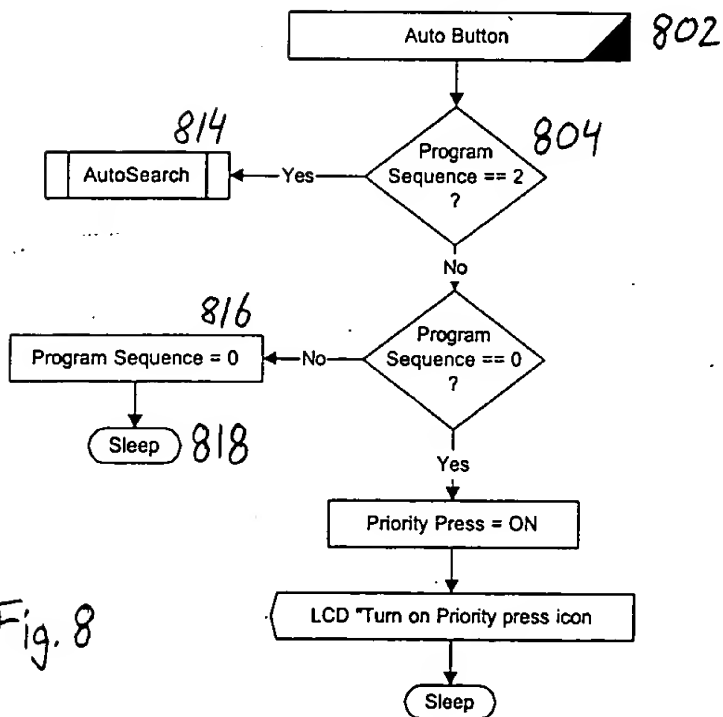


Fig. 8